Technical Documentation



Coin changer currenza C2®

Manual for configuration

03.15 Schn/JMo/Roe
Version 1.2
HB.C2K-EN

Crane Payment Innovations GmbH • Zum Fruchthof 6 • D-21614 Buxtehude
Phone: +49 (0) 41 61-729-0 • Fax: +49 (0) 41 61-729-115 • E-mail: info@cranepi.com • www.cranepi.com

Tabel of contents

1 About this manual 7

Text conventions 7

Additional technical documentation 8

2 General information 9

The vending machine interfaces 9

The user interfaces 9

When to use the HENRI service tool? 9

Connecting HENRI 10

3 Presettings 11

Selecting menu language 11

Setting display contrast (only c² blue) 12

Specifying display message for operating mode (only c² blue) 13

4 Settings for filling and emptying cassette 14

Which settings should be done? 14

- Settings for tube refilling by coin insertion 14
- Settings for direct refilling the removed cassette 14

Configuring float levels 15

- Specifying float level per tube 15
- Activating/deactivating float-up function 16
- Setting tube counters to float levels automatically 17

Correcting tube counters according to filling level sensors 18

Resetting tube counters before fill-up 19

Redirecting cash-box coins to return area 20

Reporting inserted coins to machine (only c² MDB) 21

Disabling/enabling inventory keys / disabling/enabling inventory keys using MDB/BDV protocol (only c² blue/green) 22

5 Prices and vending modes (only c² BDV/Executive) 23

Price holding in the coin changer 23
Setting prices 24
Activating coin changer price holding 25
Displaying price 26

Configuring "Committed to vend" or change return at any time 27

Configuring single or multi vend 28

Resetting or storing credit which cannot be paid out 29

6 Cash acceptance 30

Limiting acceptance of coins and banknotes (only c² BDV/Executive) 31

Limiting acceptance of tube coins (filling level limitation) 32

Inhibiting coins 33

Inhibiting high-value coins if there is not enough change (only c² BDV/Executive) 34

Optimising acceptance of genuine coins/rejection of fraud coins (defining acceptance tolerances) 35

Selecting coin group A or B 36

Preventing coins from getting stuck in the tubes 38
Configuring security stock for each tube 38
Transmitting tube filling level incl. security stock to VMC (only c² MDB) 39
Enabling VMC to payout security stock with DISPENSE (only c² MDB) 39

7 Change payout 40

Reassigning coin cassette 40

Reporting more than 255 coins of the same payout denomination to VMC (only c² MDB) 42

Limiting change return (only c² BDV/Executive) 43

Configuring conditions for tube empty message 44

Activating low-power single-motor payout 46

Activating change machine mode (small coins first) 47
8-way c² spider payout (only c² MDB) 48
Assigning the c² spider cash box/hopper coins (only c² MDB) 48
Inverting assignment of hopper and spider sorter chute (only c² MDB) 49

8 Peripheral 50

Hopper settings 50
Setting hopper coins 51
Setting up communication with hopper(s) 52
Making hopper coins to be paid out first 53
Disabling/Enabling hopper empty and/or full detection 54
Recycler settings 55
Setting up communication with recycler 55
Inhibiting high-value banknotes depending on change stock (only c² MDB) 57
Paying out all banknotes (compensating the machine‘s security stock) (only c² MDB) 58
Bill validator settings (only c² BDV/Executive) 59
Setting up communication with MDB bill validator 59
Inhibiting/releasing banknote acceptance depending on change stock or card payments 60
Activating/deactivating escrow function 61
Card reader settings (only c² BDV/Executive) 62
Setting up communication with MDB/BDV card reader 62
Activating second price list for card transactions 63
Limiting debit card recharging (only for BDV/MDB card readers) 64
Setting up communication with external audit unit (only c² BDV/Executive) 65

9 Audit (option) 66

Setting vending machine number 66

Setting date and time 68

Specifying data to be printed 69

Setting output device 70

Selecting printing format 70

Selecting type of output device 71

Activating maximum IrDA readout speed (only c² with IrDA interface on coin validator) 72

Activating Bluetooth audit (only c² with Bluetooth module) 73

10 Basic settings 74

Changing smallest coin value (base value) 74

Changing decimal point position (only c² MDB) 76

Configuring alternative coin value for second currency or as token value 77

Changing currency/calling code (only c² MDB) 78

Changing MDB level (only c² MDB) 79

Selecting mains operation or battery operation (only c² MDB) 80

Configuring wake-up time (only c² MDB) 81

Providing coin changer configuration with write protection for BDV machines (only c² BDV) 82

11 Batch configuration 83

Configuring coin changer master 83

Storing desired configuration in HENRI 84

Transferring desired configuration to coin changers 84

Adapting individual settings 85

12 Index 86

1 About this manual

This manual describes how to set the c² concerning:

- Language and display (Presettings)
- Coin cassette filling and emptying
- Prices and vending modes
- Cash acceptance
- Change payout
- Peripherals
- Audit



This manual does not describe the whole functional range of the coin changer currenza c² or HENRI service tool. In order to be able to use the whole functional range of the devices safely as well as to configure all possible functions, all manuals and short reference guides for the NRI changer currenza c² and HENRI service tool must be read carefully (PDF download at *www.cranepi.com, NRI Support*).

Text conventions

To make it easier for you to navigate within these instructions and to operate the devices, the following accentuations were made in the text:



Safety instructions, which you must observe in order to protect operators and equipment.



Notes, which you must observe in order to protect the environment.



Special notes, which are to facilitate the use of the devices.



At the beginning of a chapter you will find a short "guide", which summarises the content of the chapter.

1 2 3 ... Requests to perform an action are numbered in another typeface and, if possible, listed in a table.

Service DISPLAY TEXTS are set in small capitals.



BUTTONS and **MENU ITEMS** are shown in bold capitals.

Additional technical documentation

Apart from the manual you already have, there is further documentation for the currenza c² and HENRI service tool, e.g. about service work and technical data. All product descriptions are available as PDF at *www.cranepi.com, NRI Support*.

2 General information

In order to keep the manual as short as possible, this chapter provides you with all general information, which will not be repeated in the following chapters (e.g., connecting the HENRI service tool).

The vending machine interfaces

This manual refers to the configuration of all currenza c² models. The models have different configuration options, e.g., due to different vending machine interfaces.

The chapter title supplement put in brackets limits a certain function or setting for one or several interfaces.

The user interfaces

Beyond that the currenza c² models differ in their user interface. The c² blue is the only model with a user interface allowing a direct configuration at the coin changer. All other models (green, orange, white) must be connected to the HENRI service tool for configuration, that cannot be carried out using the switch block on the rear of the coin validator.

When to use the HENRI service tool?

- To configure the c² green/orange/white
- To configure a second currency/special token values in the c² blue/ green/orange/white
- As data transfer unit for e.g. current configuration and firmware files, which are supposed to be loaded into a c² blue/green/orange/white

Connecting HENRI

In the HENRI short reference guide you learn how to connect the HENRI service tool to the currenza c² with full details. At this point you will only find a short description for on-site configurations.

Plug the RJ-45 connector of the HENRI connecting cable into the top right socket of the coin changer.

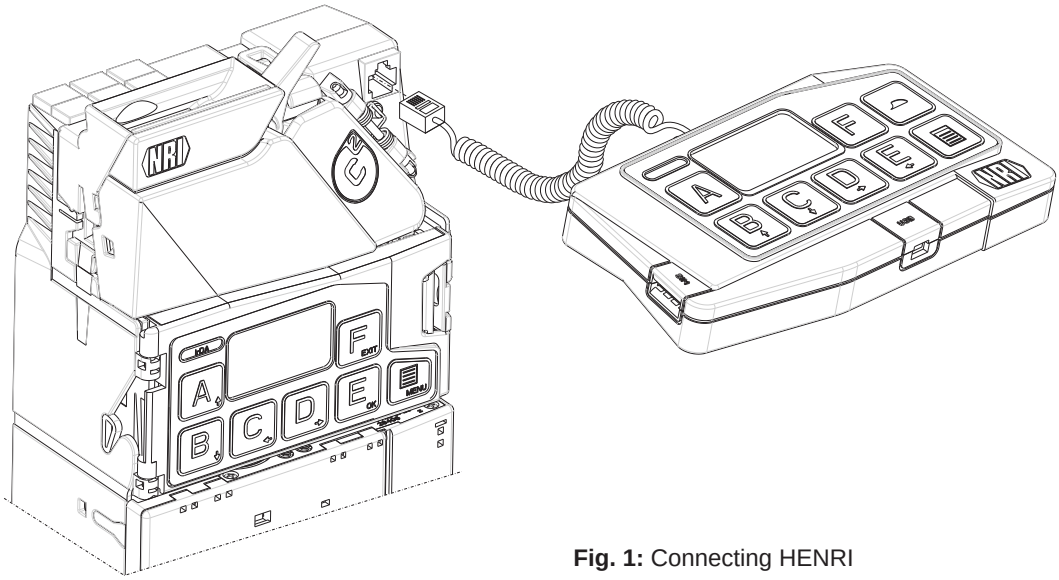


Fig. 1: Connecting HENRI

HENRI is powered by the vending machine, switches over to the c² mode automatically and shows the (vending machine) display in normal operating mode, e.g., the current change stock.

In the following chapters it has been assumed that HENRI needs to be connected to the coin changers c² green/orange/white for configuration and shall not be explained again.

3 Presettings

This chapter describes settings which are not concerned with the coin changer operation itself but must be carried out once before configuring the coin changer, if not set at Crane Payment Innovations, Buxtehude:

- Menu language
- Display contrast
- Display message

Selecting menu language

There are four different language packages for the c² menu language:

1. English, German, French, Spanish, Italian
2. English, German, French, Spanish, Dutch
3. English, Polish, Czech, Slovak, Hungarian
4. English, German, French, Turkish, Romanian

When delivered, the coin changer language package has been installed according to the customer's requirement.

To select the menu language desired from the package (also for audit receipts):

Quick approach:

`= Main menu > E = Settings > Other settings > Language`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until `Other settings`	You want to enter submenu OTHER SETTINGS
4	E	1 x	You enter the submenu
5	B	1 x	You want to set the menu LANGUAGE
6	E	1 x	Now you can set the LANGUAGE
7	A / B	until language desired	You want to set this language
8	E	1 x	You lock the language selected in memory
9		1 x/2 x	You return to main menu/operating mode

Setting display contrast (only c² blue)

The contrast of the c² blue display has a default setting of "46".

To change the contrast:

Quick approach:


`= Main menu > E = Settings > Other settings > Display contrast`


	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until `Other settings`	You want to enter submenu OTHER SETTINGS
4	E	1 x	You enter the submenu
5	B	until `Display contrast`	You want to set the DISPLAY CONTRAST
6	E	1 x	Now you can set the CONTRAST
7	D / C	until required digit	You highlight the digit to be changed
8	A / B	until required value	This value is to be set (the contrast is changing with the value set)
9	*Please repeat steps 7 and 8 to set the second digit of the contrast value, if necessary*		
10	E	1 x	You lock the set value in memory. The display has the new contrast
11		1 x/2 x	You return to main menu/operating mode


Specifying display message for operating mode (only c² blue)

During normal operating mode the currenza c² blue may display one of the following messages:

- Total CHANGE stock in coin cassette
- CASHBOX stock and total change stock in coin cassette by turns
- Total change stock and coin number per tube (INVENTORY)

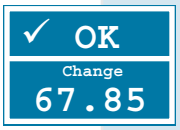

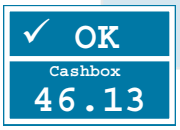

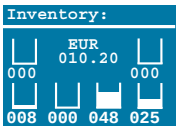

To specify the display message:

Quick approach:

= Main menu > E = Settings > Other settings > Display

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until Other settings	You want to enter submenu OTHER SETTINGS
4	E	1 x	You enter the submenu
5	B	until Display	You want to set the DISPLAY message for normal operating mode
6	E	1 x	Now you can select the DISPLAY message
7	A / B	until required message	You want to set this message
8	E	1 x	You lock the message selected in memory
9		1 x/2 x	You return to main menu/operating mode

4 Settings for filling and emptying cassette

This chapter describes useful or required settings for refilling and emptying the coin cassette:

- Configuring float level
- Setting tube counters to float-level automatically
- Correcting tube counters according to filling level sensors
- Resetting tube counters before refilling cassette
- Redirecting cash-box coins to return area
- Reporting inserted coins to machine (only c² MDB)
- Disabling/enabling inventory keys / disabling/enabling inventory keys using MDB/BDV protocol

Which settings should be done?

To enable the coin changer to register the exact coin number we recommend the following settings depending on the filling method used:

Settings for tube refilling by coin insertion

If the cassette is refilled by inserting the tube coins (and without emptying the cassette completely beforehand), see that the tube counters are not corrected according to the filling level sensors automatically, as the inserted coins will be registered exactly in the tube filling mode.

Whereas, if you remove and completely empty the cassette before inserting the tube coins, you should set the following in order to reset the tube counters before refilling the cassette:

- Resetting the tube counters before refilling the cassette
- Correcting tube counters according to filling level sensors automatically

Settings for direct refilling the removed cassette

If the cassette is removed to be directly refilled with a certain number of coins per tube, i.e. counted coins, the coin changer must be set as follows to ensure the exact registration of the coin number:

- Configuration of the coin number as float level per tube
- Automatic tube counter setting to float levels
- Deactivation of the automatic tube counter correction according to filling level sensors

If the cassette is removed to be directly refilled with any number of coins, the tube counters must be corrected according to filling level sensors automatically.

Configuring float levels

Should you wish the service personal to always fill or empty the tubes at a filling level of a certain and always identical coin number, it is advisable to configure so-called float levels.

First of all specify a number of coins for each change tube (see section "Specifying float level per tube" in this chapter).

If the tubes are refilled by inserting the tube coins with the cassette installed, you also have to activate the float-up function (see section "Activating/ deactivating float-up function" in this chapter).

If the coin cassette is going to be removed to be refilled directly, you have to activate the automatic tube counter programming (see section "Setting tube counters to float levels automatically" in this chapter).

Specifying float level per tube

To specify the float levels:

Quick approach:

`= Main menu > E = Settings > Coin settings > Float level`

	How often?	Effect	Ziel
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu
3		until `Coin settings`	You want to enter submenu COIN SETTINGS
4		1 x	You enter the submenu
5		until `Float level`	You want to enter submenu FLOAT LEVEL
6		1 x	You enter the submenu
7		until tube desired	You want to set a float level for this tube
8		1 x	Now you can set a float level for this tube
9		until required digit	You highlight the digit to be set
10		until required value	This value is to be set
11	*Please repeat steps 9 and 10 to set the other two digits of the float level, if necessary*		
12		1 x	You lock the set float level in memory
13	*Please repeat steps 7 to 12 to set the float levels of the other tubes, if necessary*		
14		1 x/2 x	You return to main menu/operating mode

Activating/deactivating float-up function

You should activate the float-up function if the cassette is refilled by inserting the tube coins on site. This makes sure that all tube coins being inserted after the float level has been reached will be directed to the return area.



If the float-up function is activated but no float level configured (float level for the single tubes = 000), the tube will be filled until the optional 50% filling level sensor is covered, or emptied until this sensor is no longer covered.

To activate/deactivate the float-up function:

Quick approach:

`= Main menu > E = Settings > Operating modes > Float-up`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu. The correct menu item has already been selected
3		1 x	You enter submenu OPERATING MODES
4		until `Float-up`	You want to activate/deactivate the FLOAT-UP function
5		1 x	Now you can activate/deactivate the FLOAT-UP function
6		until setting desired	You want to activate/deactivate the function
7		1 x	You lock the setting in memory
8		1 x/2 x	You return to main menu/operating mode

Setting tube counters to float levels automatically

Activate this function if you remove the coin cassette to directly refill it with a certain number of coins (float levels). This is to ensure that the tube counters will be set to the float level coin number automatically in the tube filling mode as soon as you remove the cassette from the coin changer.

To activate/deactivate the automatic tube counter programming:

Quick approach:

`= Main menu > E = Settings > Operating modes > Program tube counters autom.`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu. The correct menu item has already been selected
3		1 x	You enter submenu OPERATING MODES
4		until `Program tube counters autom.`	You want to activate/deactivate the function
5		1 x	Now you can activate/deactivate the function
6		until setting desired	You want to activate/deactivate the function
7		1 x	You lock the setting in memory
8		1 x/2 x	You return to main menu/operating mode

Correcting tube counters according to filling level sensors

Six tube counters are monitoring the exact number of coins in the tubes and register each coin collected by and paid out from the tubes.

In addition each tube is equipped with up to four filling level sensors. If the coin changer is supposed to compare the tube counter readings with the measured filling levels of the sensors after a coin has been accepted or paid out and correct the tube counters if necessary, you should activate the automatic tube counter correction.



If the vending machine control is unable to process the automatic correction of the tube counters, you must deactivate this function.

If the tube counter correction is deactivated, ensure that the tubes are emptied either using the inventory keys or the service menu. Otherwise the tube counters do not equal zero before refilling the tubes, but the number of coins registered before emptying the tubes (cp. separate service manual).

To activate/deactivate the tube counter correction:

Quick approach:

= Main menu > E = Settings > Operating modes > Tube counter correction

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu. The required menu item has already been selected
3		1 x	You enter submenu OPERATING MODES
4		until Tube counter correction	You want to activate/deactivate the TUBE COUNTER CORRECTION
5		1 x	Now you can activate/deactivate the TUBE COUNTER CORRECTION
6		until setting desired	You want the tube counters to be corrected/not corrected according to filling level sensors
7		1 x	You lock the setting in memory
8		1 x/2 x	You return to main menu/operating mode

Resetting tube counters before fill-up

If change is refilled by inserting the tube coins but the cassette is removed to be completely emptied before fill-up, the coin changer should be set so that the tube counters will be reset when removing the cassette, i.e. before refilling the tubes.

To activate/deactivate the tube counter reset:

Quick approach:

 = Main menu > E = Settings > Operating modes > Tube counters correct. to zero

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu. The required menu item has already been selected
3		1 x	You enter submenu OPERATING MODES
4		until Tube counters correct. to zero	You want the TUBE COUNTERS to be reset/ignored
5		1 x	Now you can set the function
6		until setting desired	You want the tube counters to be reset/ignored when removing the coin cassette
7		1 x	You lock the setting in memory
8		1 x/2 x	You return to main menu/operating mode

Redirecting cash-box coins to return area

If you replenish change by inserting coins and if you do not want the cash-box coins to be accepted but only the tube coins, the coin changer can be set so that all cash-box coins will be inhibited and redirected to the return area when the changer is in tube filling mode.

To disable/enable the cash-box coins when refilling the coin cassette:

Quick approach:

 = Main menu > E = Settings > Operating modes > Only tube coins in filling mode

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu. The required menu item has already been selected
3		1 x	You enter submenu OPERATING MODES
4		until Only tube coins in filling mode	You want only tube coins/also cash-box coins to be accepted
5		1 x	Now you can set the function
6		until setting desired	In tube filling mode you want only tube coins/also cash-box coins to be accepted
7		1 x	You lock the setting in memory
8		1 x/2 x	You return to main menu/operating mode

Reporting inserted coins to machine (only c² MDB)

If you replenish change by inserting the tube coins in the tube filling mode and if you want the machine to count the coins inserted and display them for checking purposes, the coin changer may transfer a filling report to the machine.

To activate/deactivate the filling report function:

Quick approach:

`= Main menu > E = Settings > Operating modes > Manual fill report`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu. The required menu item has already been selected
3		1 x	You enter submenu OPERATING MODES
4		until `Manual fill report`	You want the machine to receive/not receive a filling report
5		1 x	Now you can set the function
6		until setting desired	You want the changer to transfer/not transfer a filling report
7		1 x	You lock the setting in memory
8		1 x/2 x	You return to main menu/operating mode

Disabling/enabling inventory keys / disabling/enabling inventory keys using MDB/BDV protocol (only c² blue/green)

During normal operating mode as well as in the Inventory menu the coin changer keys A, B, C, D, E and F are used as inventory keys. When operating the inventory keys the coin changer pays out coins from the corresponding change tube A, B, C, D, E or F.

You may configure the coin changer so that the inventory keys are

- enabled,
- disabled or
- enabled/disabled by the VMC

To disable/enable the inventory keys:

Quick approach:

 = Main menu > E = Settings > Operating modes > Configure inventory keys

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu. The required menu item has already been selected
3		1 x	You enter submenu OPERATING MODES. The required menu item has already been selected
4		1 x	You want to enable/disable the INVENTORY KEYS
5		until setting desired	You want the keys to be disabled/ enabled/controlled by the VMC
6		1 x	You lock the setting in memory
7		1 x/2 x	You return to main menu/operating mode

5 Prices and vending modes (only c² BDV/Executive)

This BDV & Executive chapter describes how to

- hold the prices in the coin changer
- configure "Committed to vend" or change return at any time
- configure single or multi vend
- reset or store credit which cannot be paid out

Price holding in the coin changer

Usually, the prices for the Executive protocol are set in the vending machine, so that the coin changer does not know which product has been selected and sold.

In order to be able to hold the prices in the coin changer and include the single product-specific turnovers in the audit in this section you will learn how to

- set prices in the coin changer and
- activate price holding in the coin changer.

Beyond that the coin changer may display the price of the product selected.

Setting prices

You can set up to 150 prices:

Quick approach:

= Main menu > E = Settings > Selling prices

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until Selling prices	You want to enter submenu SELLING PRICES
4	E	1 x	You enter the submenu
5	A / B	until price desired	You want to set this price
6	E	1 x	Now you can set this price
7	D / C	until required digit	You highlight the digit of the price to be set
8	A / B	until required value	This value is to be set
9	*Please repeat steps 7 and 8 to set the other digits of the price, if necessary*		
10	E	1 x	You lock the set price in memory
11	*Please repeat steps 5 to 10 to the other prices, if necessary*		
12		1 x/2 x	You return to main menu/operating mode

You may divide the 150 prices into 2 x 75 prices for card and cash payment. The first price list (prices 1–75) is valid for transactions without any card inserted (cash payment), and the second price list (prices 76–150) for transactions with a card inserted (see section "Activating second price list for card transactions" in Chap. 8 "Peripheral").

Activating coin changer price holding

If you want the coin changer to hold the prices and include the product-specific sales data in the audit, you must activate the price holding function.

To activate/deactivate the price holding function:

Quick approach:

`= Main menu > E = Settings > Operating modes > Selling mode > Price Holding > Price Holding`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu. The required menu item has already been selected
3		1 x	You enter submenu OPERATING MODES
4		until `Selling mode`	You want to enter submenu SELLING MODE
5		1 x	You enter the submenu
6		until `Price Holding`	You want to enter submenu PRICE HOLDING
7		1 x	You enter the submenu PRICE HOLDING. The required menu item has already been selected
8		1 x	Now you can activate/deactivate the PRICE HOLDING function
9		until setting desired	You want to activate/deactivate the function
10		1 x	You lock the setting in memory
11		1 x/2 x	You return to main menu/operating mode

Displaying price

If you want the machine to display the price of the product selected, you have to adapt the coin changer configuration accordingly.

To display/suppress the price:

Quick approach:

`= Main menu > E = Settings > Operating modes > Selling mode > Price Holding > Indicate price of product`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu. The required menu item has already been selected
3		1 x	You enter submenu OPERATING MODES
4		until `Selling mode`	You want to enter submenu SELLING MODE
5		1 x	You enter the submenu
6		until `Price Holding`	You want to enter submenu PRICE HOLDING
7		1 x	You enter the submenu PRICE HOLDING
8		until `Indicate price of product`	You want the price of the product selected to be displayed/not displayed
9		1 x	Now you can activate/deactivate the function
10		until setting desired	You want the price to be displayed/not displayed
11		1 x	You lock the setting in memory
12		1 x/2 x	You return to main menu/operating mode

Configuring "Committed to vend" or change return at any time

To ensure that the vending machine is not used as a money changer and inserted cash is returned whenever you want, the coin changer can be set up so that change is only paid out after a vending operation.

If the changer is not set to "Committed to vend", the customer, at any time, can cause the return of the (residual) credit by pressing the return button, even without having pressed a selection button or bought something.



In addition, a maximum amount of money, which is allowed to be accepted at most for a transaction, can be configured (see section "Limiting acceptance of coins and banknotes (only c² BDV/Executive)" in Chap. 6 "Cash acceptance").

To activate/deactivate "Committed to vend":

Quick approach:

`= Main menu > E = Settings > Operating modes > Selling mode > Committed to vend`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu. The required menu item has already been selected
3	E	1 x	You enter submenu OPERATING MODES
4	B	until `Selling mode`	You want to enter submenu SELLING MODE
5	E	1 x	You enter the submenu
6	B	until `Committed to vend`	You want/do not want the customer to buy something before he can claim back the change
7	E	1 x	Now you can set the function
8	A/B	until setting desired	You want to activate/deactivate the "Committed to vend" function
9	E	1 x	You lock the setting in memory
10		1 x/2 x	You return to main menu/operating mode

Configuring single or multi vend

In principle the customer can purchase a number of products one after the other once he has inserted his money (multi vend). The change is not paid out until the customer has operated the return lever.

However, the coin changer can also be set to "single vend", i.e. the customer can only insert coins until the value of the highest set price is reached. Change is then paid out automatically after each vend.

To set single or multi vend:

Quick approach:

`= Main menu > E = Settings > Operating modes > Selling mode > Single/Multi vend`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu. The required menu item has already been selected
3	E	1 x	You enter submenu OPERATING MODES
4	B	until `Selling mode`	You want to enter submenu SELLING MODE
5	E	1 x	You enter the submenu. The required menu item has already been selected
6	E	1 x	You want to set SINGLE or MULTI VEND
7	A / B	until setting desired	Single or multi vend is to be activated
8	E	1 x	You lock the setting in memory
9		1 x/2 x	You return to main menu/operating mode

Resetting or storing credit which cannot be paid out

If the remaining credit cannot be paid out of the coin cassette or connected hoppers or recyclers (payout units are empty or no appropriate tube/hopper coin/recycler banknote programmed), that credit can either be reset or saved for the next vending operation or customer.

To reset/store the credit which cannot be paid out:

Quick approach:

 = Main menu > E = Settings > Operating modes > Residual credit

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu. The required menu item has already been selected
3		1 x	You enter submenu OPERATING MODES
4		until Residual credit	You want to specify how to manage the RESIDUAL CREDIT
5		1 x	Now you can set the function
6		until setting desired	You want the residual credit which cannot be paid out to be DELETED/stored
7		1 x	You lock the setting in memory
8		1 x/2 x	You return to main menu/operating mode

6 Cash acceptance

This chapter describes how to adapt the acceptance of coins (and banknotes) to the machine environment:

- Limiting acceptance of coins and banknotes (only c² BDV/Executive)
- Limiting acceptance of tube coins (filling level limitation)
- Inhibiting coins
- Inhibiting high-value coins if there is not enough change (only c² BDV/Executive)
- Optimising acceptance of genuine coins/rejection of fraud coins (defining acceptance tolerances)
- Selecting coin group A or B
- Preventing coins from geting stuck in the tubes (security stock)

Settings defining the acceptance of tokens are described in the c² Service Manual.

Limiting acceptance of coins and banknotes (only c² BDV/Executive)

In order to prevent the vending machine from being used as a money changer, you can set a maximum amount of money which may be accepted during a single vending operation (acceptance limitation). If this amount is reached or exceeded, the acceptance of coins and bills is inhibited.



In addition, you may set the coin changer so that the change is returned only after a transaction and automatically (see section "Configuring "Committed to vend" or change return at any time" in Chap. 5 "Prices and vending modes").

To configure the acceptance limitation:

Quick approach:

= Main menu > E = Settings > Operating modes > Limitations > Acceptance limit

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu. The required menu item has already been selected
3	E	1 x	You enter submenu OPERATING MODES
4	B	until Limitations	You want to enter submenu LIMITATIONS
5	E	1 x	You enter the submenu. The required menu item has already been selected
6	E	1 x	You want to set the acceptance limitation
7	D / C	until required digit	You highlight the digit to be set
8	A / B	until required value	This value is to be set
9	*Please repeat steps 7 and 8 to set the other digits of the acceptance limitation, if necessary*		
10	E	1 x	You lock the set acceptance limitation in memory
11		1 x/2 x	You return to main menu/operating mode

Limiting acceptance of tube coins (filling level limitation)

The changer can be configured so that each change tube accepts no more than a specific number of coins. When this number of coins is reached in a tube, all further coins for this tube are then directed into the cash-box temporarily. Only when coins have been paid out of this tube, coins are again sorted into the tube.



If this function is not used (setting "000"), the upper filling level sensor (full sensor) of the tubes determines, irrespective of the number of coins, from when the coins will be sorted into the cash-box and no longer into the tubes.

To configure the filling level limitation:

Quick approach:

= Main menu > E = Settings > Coin settings > Filling level limitation

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until `Coin settings`	You want to enter submenu COIN SETTINGS
4	E	1 x	You enter the submenu
5	B	until `Filling level limitation`	You want to enter submenu FILLING LEVEL LIMITATION
6	E	1 x	You enter the submenu
7	A / B	until tube desired	You want to set a filling level limitation for this tube
8	E	1 x	Now you can set a limitation for this tube
9	D / C	until required digit	You highlight the digit to be set
10	A / B	until required value	This value is to be set
11	*Please repeat steps 9 and 10 to set the other two digits of the filling level limitation, if necessary*		
12	E	1 x	You lock the set filling level limitation in memory
13	*Please repeat steps 7 to 12 to set the filling level limitations of the other tubes, if necessary*		
14		1 x/2 x	You return to main menu/operating mode

Inhibiting coins

If you want certain coins to be no longer accepted for payment at the machine, you may inhibit these coins (temporarily).



The coin changer stores the coins 1–16 in ascending coin value order, i.e. "coin 01" is always the lowest-value and "coin 16" always the highest-value coin programmed.

To inhibit/release a certain coin:

Quick approach:

= Main menu > E = Settings > Inhibit mask > Inhibit mask

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until Inhibit mask	You want to enter submenu INHIBIT MASK
4	E	1 x	You enter the submenu. The required menu item has already been selected
5	E	1 x	You want to inhibit/release a coin
6	A / B	until coin desired	You want to inhibit/release this coin
7	E	1 x	Now you can inhibit/release this coin
8	A / B	until setting desired	You want this coin to be inhibited/ released
9	E	1 x	You lock the setting in memory
10		1 x/2 x	You return to main menu/operating mode

Inhibiting high-value coins if there is not enough change (only c² BDV/Executive)

If you want high-value coins to be no longer accepted whenever the machine displays "tube empty" (see section "Configuring conditions for tube empty message (only c² BDV/Executive)" in Chap. 7 "Change payout"), they can be inhibited automatically depending on this message.

To inhibit/release a certain coin if there is not enough change:

Quick approach:

`= Main menu > E = Settings > Inhibit mask > Inhibit if tube empty`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu
3		until `Inhibit mask`	You want to enter submenu INHIBIT MASK
4		1 x	You enter the submenu
5		until `Inhibit if tube empty`	You want to inhibit/release coins automatically if there is not enough change
6		1 x	Now you can select the relevant coin
7		until coin desired	You want to inhibit/release this coin
8		1 x	Now you can inhibit/release this coin
9		until setting desired	You want this coin to be inhibited/ released if there is not enough change
10		1 x	You lock the setting in memory
11		1 x/2 x	You return to main menu/operating mode

Optimising acceptance of genuine coins/rejection of fraud coins (defining acceptance tolerances)

For the acceptance of (high-value) coins programmed the coin changer is capable of having up to three acceptance bands with different acceptance tolerances. In order that genuine coins are always accepted and fraud coins rejected reliably you may assign a "normal", "narrow" or "very narrow" (smallest acceptance tolerances) acceptance band.



Narrow and very narrow acceptance bands possess a lower acceptance rate of genuine coins.

To select the acceptance tolerances:

Quick approach:

 = Main menu > E = Settings > Coin settings > Security level

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu
3		until Coin settings	You want to enter submenu COIN SETTINGS
4		1 x	You enter the submenu
5		until Security level	You want to specify a coin's acceptance tolerances
6		1 x	Now you select the coin
7		until coin with problematic acceptance	You want to select a NORMAL/NARROW/ VERY NARROW acceptance band for this coin
8		1 x	Now you can select the acceptance band
9		until acceptance band width desired	You want the coin to be accepted in this band width
10		1 x	You lock the setting in memory
11		1 x/2 x	You return to main menu/operating mode

Selecting coin group A or B

The coins porgrammed in the coin changer may have been assigned to two coin groups A or B at the manufacturer, e.g., to differentiate between two currencies (1st currency = coin goup A, 2nd currency = coin group B). In future you can modify the coin group setting using the configuration software currenza heartbeat (cp. separate heartbeat manual)

These two coin groups can be selected using the switching block on the rear of the coin validator, in order that the coin changer accepts either coin group A or B:

1. Turn machine's power off.
2. Unlatch coin validator and remove it from the changer (see Fig. 2, A & B).

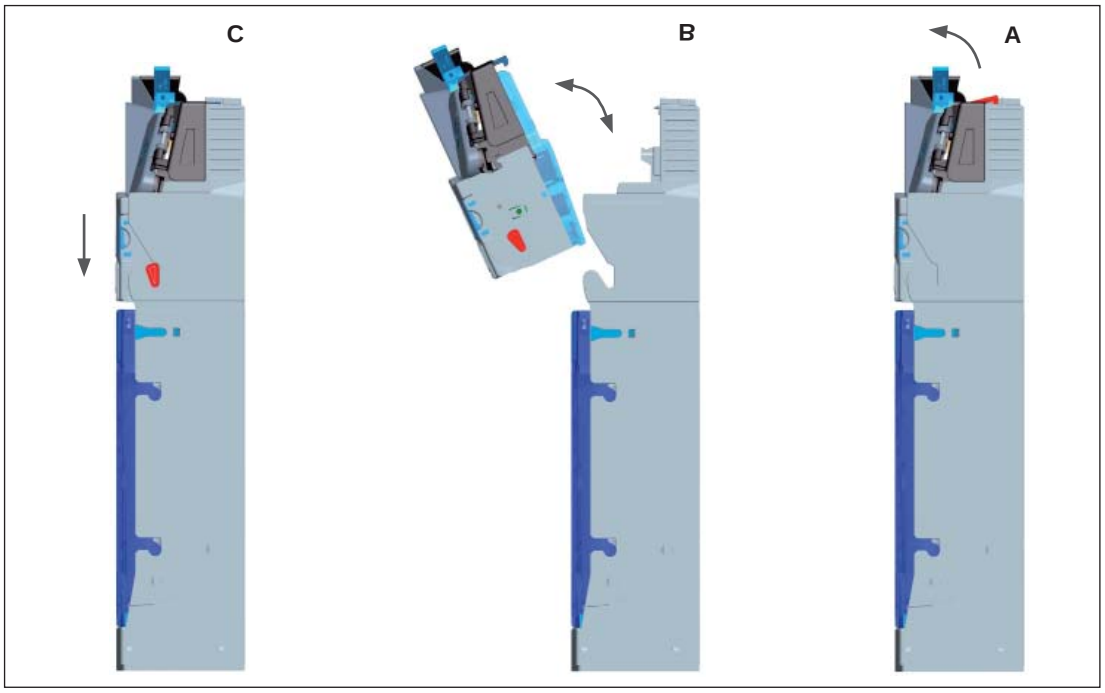


Fig. 2: Removing and reinstalling coin validator

3 Use DIL switch 10 to select coin group A or B (see Fig. 3).

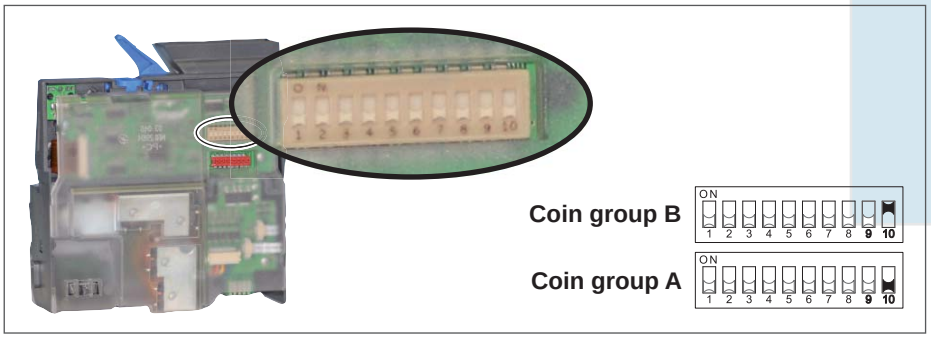


Fig. 3: Selecting coin group

4 Reinsert coin validator until it clicks in position (see Fig. 2, B & C).
5 Turn power on.
6 Turn power off and on again.

Preventing coins from getting stuck in the tubes

If a security stock is configured for the individual change tubes, the changer does not pay out a minimum number of tube coins.

For coins that cause problems during stacking and tend to stand upright instead of lying flat, a relatively high setting for the security stock should be selected since the coins will no longer spring back and stand upright when they fall onto a higher stack of coins.

In case there is no setting (entry "00"), the security stock is set to 3 automatically.

MDB changers can also be set so that the configured security stock can be paid out by the vending machine and the security stock can also be transmitted to the vending machine whenever the machine scans the tube filling level.

Configuring security stock for each tube

To configure the security stock (1–9 coins):

Quick approach:

= Main menu > E = Settings > Coin settings > Security stock

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until `Coin settings`	You want to enter submenu COIN SETTINGS
4	E	1 x	You enter the submenu
5	B	until `Security stock`	You want to enter submenu SECURITY STOCK
6	E	1 x	You enter the submenu
7	A / B	until tube desired	You want to set a security stock for this tube
8	E	1 x	Now you can set a security stock for this tube
9	D / C	until required digit	You highlight the digit to be set
10	A / B	until required value	This value is to be set
11	*Please repeat steps 9 and 10 to set the other digit of the security stock, if necessary*		
12	E	1 x	You lock the set security stock in memory
13	*Please repeat steps 7 to 12 to the security stocks of the other tubes, if necessary*		
14		1 x/2 x	You return to main menu/operating mode

Transmitting tube filling level incl. security stock to VMC (only c² MDB)

The coin changer is able to transmit the filling level of the tubes inclusive of the security stock configured to the vending machine control system.

To define the data to be transferred:

Quick approach:

`= Main menu > E = Settings > Operating modes > Security stock to VMC`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu. The correct menu item has already been selected
3		1 x	You enter submenu OPERATING MODES
4		until `Security stock to VMC`	You want the security stock to be SENT/ NOT TO BE SENT TO THE VMC
5		1 x	Now can set the function
6		until setting desired	The security stock is to be sent/not to be sent
7		1 x	You lock the setting in memory
8		1 x/2 x	You return to main menu/operating mode

Enabling VMC to payout security stock with DISPENSE (only c² MDB)

If you want the vending machine to be able to pay out also the security stock using the DISPENSE command:

Quick approach:

`= Main menu > E = Settings > Operating modes > Security stock in the tubes`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu. The correct menu item has already been selected
3		1 x	You enter submenu OPERATING MODES
4		until `Security stock in the tubes`	You want a PAYABLE/NOT PAYABLE security stock
5		1 x	Now you can set the function
6		until setting desired	You want the VMC to be able/not to be able to payout the security stock
7		1 x	You lock the setting in memory
8		1 x/2 x	You return to main menu/operating mode

7 Change payout

This chapter describes how to adapt the change payout to the machine environment:

- Reassigning coin cassette
- Reporting more than 255 coins of the same payout denomination to VMC (only c² MDB)
- Limiting change return (only c² BDV/Executive)
- Configuring conditions for tube empty message (only c² BDV/Executive)
- Activating low-power single-motor payout
- Activating change machine mode (small coins first)
- Configuring 8-way c² spider payout (only c² MDB)

Reassigning coin cassette

If you exchanged the change tubes or coin cassette, in order to be able to pay out other or more coins, the new sorting must be set in the coin changer.

The coin changer comes with pre-programmed coin cassette combinations, which can be selected depending on the new sorting.

If the new tube combination is not part of the pre-programmed combinations, it may be configured manually.

To select a new tube combination:

Quick approach:

= Main menu > E = Settings > Coin settings > Coin sorting > Select tube cassette

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until Coin settings	You want to enter submenu COIN SETTINGS
4	E	1 x	You enter the submenu
5	B	until Coin sorting	You want to enter submenu COIN SORTING
6	E	1 x	You enter the submenu. The required menu item has already been selected
7	E	1 x	You want to select a new pre-programmed tube combination
8	A / B	until required tube combination	This tube combination matches your new coin cassette and is to be configured
9	E	1 x	You lock the setting in memory
In case none of the tube combinations suggested fits the new coin cassette, you may also configure the individual tube coins:			
A	F	1 x	You want to enter submenu COIN SORTING
B	B	until New payout combination	You want to configure the tube coins individually
C	E	1 x	Now you can configure the tube coins
D	A / B	until required tube	You want to set a new coin value for this tube
E	E	1 x	Now you can enter a value
F	D / C	until required digit	You highlight the digit to be set
G	A / B	until required value	This value is to be set
H	*Please repeat steps F and G to set the other digits of the coin value, if necessary*		
I	E	1 x	You lock the set tube coin value in memory
J	*Please repeat steps D to I to set the tube values of the other tubes, if necessary*		
10/ K		1 x/2 x	You return to main menu/operating mode

Reporting more than 255 coins of the same payout denomination to VMC (only c² MDB)

If you want the coin changer to collect more than 255 coins of the same payout denomination in several tubes of the coin cassette, the MDB protocol would report not more than 255 coins as a standard.

Activating this function the changer will be able to register twice as much tube coins (510 each) and report the real number to the VMC:

Quick approach:

 = Main menu > E = Settings > Operating modes > Tube coins two times in SETUP

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu. The required menu item has already been selected
3		1 x	You enter submenu OPERATING MODES
4		until Tube coins two times in SETUP	You want to ACTIVATE/DEACTIVATE the twice as much tube coins function
5		1 x	Now you can set the function
6		until setting desired	You want the changer to register and report up to 510/255 coins of the same tube denomination
7		1 x	You lock the setting in memory
8		1 x/2 x	You return to main menu/operating mode

Limiting change return (only c² BDV/Executive)

You have the possibility to define a maximum residual amount that the changer is supposed to pay out to the customer at most. The customer must then purchase enough during one vending operation so that the residual credit is less than the set change limitation.

To configure the change limitation:

Quick approach:

= Main menu > E = Settings > Operating modes > Limitations > Change limit

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu. The required menu item has already been selected
3		1 x	You enter submenu OPERATING MODES
4		until `Limitations`	You want to enter submenu LIMITATIONS
5		1 x	You enter the submenu
6		until `Change limit`	You want to set the change limitation
7		1 x	Now you can set the function
8		until required digit	You highlight the digit to be set
9		until required value	This value is to be set
10	*Please repeat steps 8 and 9 to set the other digits of the change limitation, if necessary*		
11		1 x	You lock the set change limitation in memory
12		1 x/2 x	You return to main menu/operating mode

Configuring conditions for tube empty message

The lowest filling level sensor (empty sensor) signals that a tube is empty. When you want the vending machine to display "tube empty", i.e. which tube(s) is/are to be empty, in order that the empty message is displayed, you may specify depending on the tube coins.

The following coding scheme can be configured:

Code 00 "Tube empty" if tube M_1 or M_2 or tubes M_3 and M_4 empty

Code 01 “Tube empty” if tubes $M_{1–4}$ empty

Code 02 “Tube empty” if tubes $M_{1–3}$ empty

Code 03 “Tube empty” if tubes $M_{1–2}$ empty

Code 04 “Tube empty” if tubes M_1 and M_3 empty

Code 05 “Tube empty” if tubes M_1 and M_2 or tube M_3 empty

Code 06 “Tube empty” if tube M_1 or M_2 or M_3 empty

Code 07 “Tube empty” if tube M_1 or M_2 empty

Code 08 “Tube empty” if tube M_1 empty

Code 09 “Tube empty” if tube M_2 empty

Code 10 “Tube empty” if tube M_3 empty

Code 11 “Tube empty” if tube M_4 empty

Code 12 “Tube empty” if tube M_5 empty

Code 13 “Tube empty” if tube M_6 empty

Code 14 “Tube empty” if tubes $M_{2–3}$ empty

Code 15 “Tube empty” if tubes M_2 and M_4 empty

Code 16 “Tube empty” if tube M_1 or M_5 empty

M_1 = Tube coin with lowest value
M_6 = Tube coin with highest value

To configure the tube empty code:

Quick approach:

= Main menu > E = Settings > Coin settings > Condition for tube empty

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until Coin settings	You want to enter submenu COIN SETTINGS
4	E	1 x	You enter the submenu
5	B	until Condition for tube empty	You want to configure a tube empty code
6	E	1 x	Now you can set the function (cp. table above)
7	D / C	until required digit	You highlight the digit to be set
8	A / B	until required value	This value is to be set
9	*Please repeat steps 7 and 8 to set the second digit of the code, if necessary*		
10	E	1 x	You lock the set code in memory
11		1 x/2 x	You return to main menu/operating mode

Activating low-power single-motor payout

If you want the coin changer to use as less electricity as possible, e.g. in battery operation, it may use only one motor instead of all motors at the same time when paying out coins.

To activate/deactivate the single-motor payout:

Quick approach:

`= Main menu > E = Settings > Operating modes > Simple payout`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu. The required menu item has already been selected
3		1 x	You enter submenu OPERATING MODES
4		until `Simple payout`	You want to ACTIVATE/DEACTIVATE the single-motor payout
5		1 x	Now you can set the function
6		until setting desired	When paying out, you want one/all motors to be controlled
7		1 x	You lock the setting in memory
8		1 x/2 x	You return to main menu/operating mode

Activating change machine mode (small coins first)

If you want the coin changer to always give as small change as possible (change machine mode):

Quick approach:

`= Main menu > E = Settings > Operating modes > Payout as change machine`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu. The required menu item has already been selected
3		1 x	You enter submenu OPERATING MODES
4		until `Payout as change machine`	You want to ACTIVATE/DEACTIVATE the change machine mode
5		1 x	Now you can set the mode
6		until setting desired	When paying out, you want the changer to give as small change as possible/also high-value coins
7		1 x	You lock the setting in memory
8		1 x/2 x	You return to main menu/operating mode

8-way c² spider payout (only c² MDB)

The c² spider is able to payout up to two more coin denominations from the installed hoppers 1 and 2.

When changing the hopper or cash box coins please consider the following settings:


- Assignment of hopper/cash box coin to sorter chute/cash box channel
- Inversion of hopper-sorter chute assignment

Assigning the c² spider cash box/hopper coins (only c² MDB)

In case you want to change the spider cash-box or hopper coins we recommend you firstly set the cash box coin which is no longer to be sorted, and afterwards the new hopper coin(s).

The three sorter chutes on the rear side of the c² spider direct the coins into up to two hoppers or the cash box:

- Upper sorter chute – Hopper 2
- Bottom sorter chute – Hopper 1
- Cash box channel (default)

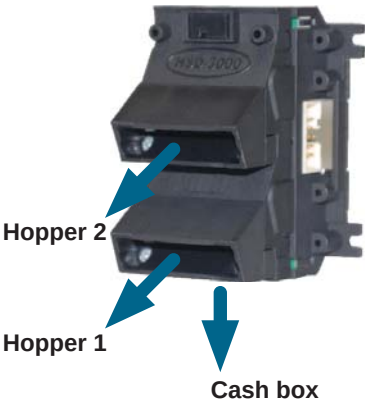

Setting the two spider hopper coins, automatically adapts hopper coins 1 and 2 in the peripheral hopper settings (see section "Setting hopper coins" in Chap. 8 "Peripheral").

Quick approach:

`= Main menu > E = Settings > Coin settings > Coin sorting > spider sorting`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until `Coin settings`	You want to enter submenu COIN SETTINGS
4	E	1 x	You enter the submenu
5	B	until `Coin sorting`	You want to enter submenu COIN SORTING
6	E	1 x	You enter the submenu
7	B	until `spider sorting`	You want to configure the hopper and cash box coins

	Press key ...	How often?	Effect
8	E	1 x	Now you can configure the hopper and cash box coins
9	A/B	until old hopper coin	You want to direct this coin into the cash box and no longer into a hopper
10	E	1 x	Now you can select the cash box channel (default)
11	A/B	until `default`	DEFAULT will direct the coin into the cash box
12	E	1 x	You lock the DEFAULT cash box channel for the coin selected in memory
13	*Press F-key and repeat steps 9 to 12 to set (a) new hopper coin(s), if necessary (see list and figure above: for hopper 1 select LOWER OUTPUT, for hopper 2 UPPER OUTPUT)*		
14		1 x/2 x	You return to main menu/operating mode

Inverting assignment of hopper and spider sorter chute (only c² MDB)

By default the sorter chutes on the rear side of the c² spider direct the coins as described in section “Assigning the c² spider cash box/hopper coins” in this chapter. If you want the changer to invert the sorter paths, the sorter chutes direct the coins into the following hoppers:

- Upper sorter chute – Hopper 1
- Bottom sorter chute – Hopper 2

Inverting this assignment, automatically adapts hopper coins 1 and 2 in the peripheral hopper settings (see section “Setting hopper coins” in Chap. 8 “Peripheral”).

Quick approach:

`= Main menu > E = Settings > Peripheral > Hopper > Hopper 1 sorted in path 2`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until `Peripheral`	You want to enter submenu PERIPHERAL
4	E	1 x	You enter the submenu
5	B	until `Hopper`	You want to enter submenu HOPPER
6	E	1 x	You enter the submenu
7	B	until `Hopper 1 sorted in path 2`	You want to invert the spider sorting paths
8	E	1 x	Now you can invert sorting
9	A/B	until setting desired	You want to invert the spider sorting path/do not want to invert sorting
10	E	1 x	You lock the setting in memory
11		1 x/2 x	You return to main menu/operating mode

8 Peripheral

This chapter describes how to

- set up communication between coin changer and peripherals connected
- make settings on the coin changer in order to apply them to the peripherals.

You can make settings for the following peripheral devices:

- hoppers
- recycler
- bill validator
- card reader
- external audit unit

Hopper settings

If a coin type is frequently paid out as change, and the respective tube is often empty, you can use an NRI hopper interface to connect up to four hoppers to the coin changer from which the vending machine can pay out coins on an alternative basis.

In the changer, a setting must be made that one hopper or more hoppers are connected and which coin is being collected in the hopper so that the coin changer can decide which residual credit can no longer be paid out by the changer and must be paid out from the hoppers.

Beyond that you may set whether the

- hopper coins are to be paid out first or rather the tube coins
- hopper counter(s) are to be corrected according to the hopper empty and full detection readings

Setting hopper coins

To configure the value of the coins collected in the hopper(s):

The hopper designations 1–4 refer to the connectors 1–4 on the hopper interface used to connect the hopper(s) to the coin changer (cp. separate manual for the hopper interface). Hopper 1, e.g., is connected using hopper connector 1.

Quick approach:

= Main menu > E = Settings > Peripheral > Hopper > Coin value in hopper 1/2/3/4

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until Peripheral	You want to enter submenu PERIPHERAL
4	E	1 x	You enter the submenu
5	B	until Hopper	You want to enter submenu HOPPER
6	E	1 x	You enter the submenu
7	B	until Coin value in hopper 1	You want to set the value of the coins collected in hopper 1
8	E	1 x	Now you can set the value
9	D / C	until required digit	You highlight the digit to be set
10	A / B	until required value	This value is to be set
11	*Please repeat steps 9 and 10 to set the other digits of the coin value, if necessary*		
12	E	1 x	You lock the set coin value in memory
13	*Press F-key and repeat steps 7 to 12 to set further hopper coins, if necessary*		
14		1 x/2 x	You return to main menu/operating mode

The hopper connectors not in use retain coin value "00.00".

Setting up communication with hopper(s)

To activate the communication between coin changer and hopper(s):

Quick approach:

`= Main menu > E = Settings > Peripheral > Hopper > Communication with hopper`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu
3		until `Peripheral`	You want to enter submenu PERIPHERAL
4		1 x	You enter the submenu
5		until `Hopper`	You want to enter submenu HOPPER
6		1 x	You enter the submenu. The required menu item has already been selected
7		1 x	Now you can set up the communication with the hopper(s)
8		until setting desired	You want the communication to be ACTIVE/NOT ACTIVE
9		1 x	You lock the setting in memory
10		1 x/2 x	You return to main menu/operating mode

Making hopper coins to be paid out first

By default change is given out of the coin cassette first. If you want the changer to give change from the hopper(s) first:

Quick approach:

`= Main menu > E = Settings > Peripheral > Hopper > Preferential hopper coins`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu
3		until `Peripheral`	You want to enter submenu PERIPHERAL
4		1 x	You enter the submenu
5		until `Hopper`	You want to enter submenu HOPPER
6		1 x	You enter the submenu
7		until `Preferential hopper coins`	You want to activate the hopper coins first function
8		1 x	Now you can set the function
9		until `active` / `not active`	You want the changer to firstly pay out hopper / coin cassette coins
10		1 x	You lock the setting in memory
11		1 x/2 x	You return to main menu/operating mode

Disabling/Enabling hopper empty and/or full detection

If the hoppers connected are equipped with a filling level detection, the hopper coins in and out counters controlled by the coin changer will be corrected according to the hopper empty or full detection.

For a precise audit of the hopper coin number it is therefore recommended that the hopper's level detection is deactivated in order that the exact coin counters will not be corrected:

Quick approach:

`= Main menu > E = Settings > Peripheral > Hopper > No correction of hopper counters`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until `Peripheral`	You want to enter submenu PERIPHERAL
4	E	1 x	You enter the submenu
5	B	until `Hopper`	You want to enter submenu HOPPER
6	E	1 x	You enter the submenu
7	B	until `No correction of hopper counters`	You want to disable the hoppers' level detection
8	E	1 x	Now you can set the function
9	A / B	until `active` / `not active`	You want the changer to not correct the hopper counters / to correct the hopper counters
10	E	1 x	You lock the setting in memory
11		1 x/2 x	You return to main menu/operating mode

Recycler settings

If you want the vending machine to pay out banknotes as change, you may use the recycler interface to connect a recycler (banknote payout unit) to the coin changer from which the vending machine can pay out banknotes instead of coins.

Please consider the following coin changer settings for communication between both devices:

- Communication set-up
- No acceptance of high-value banknotes if there is not enough change (only c² MDB)
- Compensation of banknote security stock (only c² MDB)

Setting up communication with recycler

To activate the communication between an **MDB coin changer** and a recycler:

Quick approach:

`= Main menu > E = Settings > Peripheral > Bill recycler > Communication with recycler`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until `Peripheral`	You want to enter submenu PERIPHERAL
4	E	1 x	You enter the submenu. The required menu item has already been selected
5	E	1 x	You enter submenu BILL RECYCLER. The required menu item has already been selected
6	E	1 x	Now you can set up the communication with the recycler
7	A / B	until setting desired	You want the communication to be ACTIVE/NOT ACTIVE
8	E	1 x	You lock the setting in memory
9		1 x/2 x	You return to main menu/operating mode

To activate the communication between an **BDV/Executive coin changer** and a recycler:

Quick approach:

= Main menu > E = Settings > Peripheral > Bill recycler

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until `Peripheral`	You want to enter submenu PERIPHERAL
4	E	1 x	You enter the submenu
5	B	until `Bill recycler`	You want to set up the communication with the recycler
6	E	1 x	Now you can set up the communication
7	A/B	until setting desired	You want the communication to be ACTIVE/NOT ACTIVE
8	E	1 x	You lock the setting in memory
9		1 x/2 x	You return to main menu/operating mode

Inhibiting high-value banknotes depending on change stock (only c² MDB)

If a CashCode recycler is conntected to an MDB coin changer, you can inhibit the acceptance of high-value banknotes if there is not enough change. I.e. before each sale the coin changer decides which banknote can be accepted and which cannot be accepted, depending on the current change stock in the coin cassette and recycler.



This setting is intended for applications in vending machines which do not support this function.

To limit the banknote acceptance:

Quick approach:

`= Main menu > E = Settings > Peripheral > Bill recycler > Inhibit bill acceptance`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until `Peripheral`	You want to enter submenu PERIPHERAL
4	E	1 x	You enter the submenu. The required menu item has already been selected
5	E	1 x	You enter submenu RECYCLER
6	B	until `Inhibit bill acceptance`	You want high-value banknotes to be inhibited/always be accepted depending on the change
7	E	1 x	Now you can set the function
8	A / B	until setting desired	You want to activate/not activate the function
9	E	1 x	You lock the setting in memory
10		1 x/2 x	You return to main menu/operating mode

Paying out all banknotes (compensating the machine‘s security stock) (only c² MDB)

Some vending machines (particularly in the USA) keep a security stock of coins in the tubes. As the machine handles banknotes available for payout like tube coins not all of the banknotes can be payed out as change. If you want the vending machine to pay out all banknotes you can compensate the security stock. (For "security stock" details cp. section "Preventing coins from getting stuck in the tubes" in Chap. 6 "Cash acceptance")

To compensate the security stock:

Quick approach:

`= Main menu > E = Settings > Peripheral > Bll recycler > Empty recycler store`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu
3		until `Peripheral`	You want to enter submenu PERIPHERAL
4		1 x	You enter the submenu. The correct menu item has already been selected
5		1 x	You enter submenu RECYCLER
6		until `Empty recycler store`	You want the recycler to pay out all banknotes/keep at least 3 banknotes
7		1 x	Now you can set the function
8		until setting desired	You want to activate/deactivate the function
9		1 x	You lock the setting in memory
10		1 x/2 x	You return to main menu/operating mode

Bill validator settings (only c² BDV/Executive)

You may connect an MDB bill validator to the coin changer. Please consider the following coin changer settings for communication between both devices:

- Communication set-up
- No acceptance of banknotes when machine displays "Tube empty"
- Acceptance of banknotes only for card payments
- Escrow function

Setting up communication with MDB bill validator

To activate the communication between coin changer and MDB bill validator:

Quick approach:

`= Main menu > E = Settings > Peripheral > Bill validator > Bill validator`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until `Peripheral`	You want to enter submenu PERIPHERAL
4	E	1 x	You enter the submenu
5	B	until `Bill validator`	You want to enter submenu BILLL VALIDATOR
6	E	1 x	You enter the submenu. The required menu item has already been selected
7	E	1 x	Now you can set up the communication with the bill validator
8	A/B	until setting desired	You want the communication to be ACTIVE/NOT ACTIVE
9	E	1 x	You lock the setting in memory
10		1 x/2 x	You return to main menu/operating mode

Inhibiting/releasing banknote acceptance depending on change stock or card payments

- Inhibiting banknote acceptance if machine displays "Tube empty":
  If the coin cassette has a shortage of change and the machine displays "Tube empty" (depending on conditions set), the bill validator can be blocked automatically.
- Enabling bill validator for card payments only:
  The bill validator can always be enabled or only if a card is inserted into a card reader connected.

To inhibit/release the banknote acceptance:

Quick approach:

 = Main menu > E = Settings > Peripheral > Bill validator > Enable bill acceptance

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu
3		until Peripheral	You want to enter submenu PERIPHERAL
4		1 x	You enter the submenu
5		until Bill validator	You want to enter submenu BILL VALIDATOR
6		1 x	You enter the submenu
7		until Enable bill acceptance	You want to limit the acceptance of banknotes
8		1 x	Now you can set the function
9		until setting desired	You want the machine to accept banknotes: IF tubes are NOT EMPTY/a CARD is inserted/ALWAYS
10		1 x	You lock the setting in memory
11		1 x/2 x	You return to main menu/operating mode

Activating/deactivating escrow function

If the bill validator connected has an escrow system, you should activate the escrow function in the c² peripheral settings:

Quick approach:

`= Main menu > E = Settings > Peripheral > Bill validator > Escrow function`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until `Peripheral`	You want to enter submenu PERIPHERAL
4	E	1 x	You enter the submenu
5	B	until `Bill validator`	You want to enter submenu BILL VALIDATOR
6	E	1 x	You enter the submenu
7	B	until `Escrow function`	You want to activate/deactivate the ESCROW FUNCTION
8	E	1 x	Now you can set the function
9	A / B	until setting desired	You want the bill validator to temporarily store bills accepted in the escrow/to not use an escrow
10	E	1 x	You lock the setting in memory
11		1 x/2 x	You return to main menu/operating mode

Card reader settings (only c² BDV/Executive)

This section describes how to

- set up communication between coin changer and MDB/BDV card reader
- activate a second price list for card payments
- limit card charging
- reinitialise the card reader after a sale

Setting up communication with MDB/BDV card reader

The following card systems may be connected to the coin changer:

- BDV card system
- MDB card system (standard address)
- MDB card system (address 0x60)

To activate the communication between coin changer and card reader:

Quick approach:

`= Main menu > E = Settings > Peripheral > Cashless > BDV cashless/MDB cashless (standard addr.)/MDB cashless (address 0x60)`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until `Peripheral`	You want to enter submenu PERIPHERAL
4	E	1 x	You enter the submenu. The required menu item has already been selected
5	E	1 x	You enter submenu CASHLESS
6	B	until card reader connected	You want to set up the communication with a BDV/MDB card system (standard address)/MDB card system (address 0x60)
7	E	1 x	Now you can set up communication
8	A/B	until setting desired	You want the communication to be ACTIVE/NOT ACTIVE
9	E	1 x	You lock the setting in memory
10		1 x/2 x	You return to main menu/operating mode

Activating second price list for card transactions

You can divide the up to 150 prices into 2 x 75 prices. The first price list (prices 1–75) is valid without any card inserted (for cash sales), and the second price list (prices 76–150) is valid with a card inserted (for card payment).

To activate/deactivate the second price list:

Quick approach:

`= Main menu > E = Settings > Operating modes > Selling mode > Price Holding > 2 price lists with cashless`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu. The correct menu item has already been selected
3		1 x	You enter submenu OPERATING MODES
4		until `Selling mode`	You want to enter submenu SELLING MODE
5		1 x	You enter the submenu
6		until `Price Holding`	You want to enter submenu PRICE HOLDING
7		1 x	You enter the submenu PRICE HOLDING
8		until `2 price lists with cashless`	You want to apply another price list/the standard price list to sales with card
9		1 x	Now you can set the function
10		until setting desired	You want the second price list to be activated/deactivated
11		1 x	You lock the setting in memory
12		1 x/2 x	You return to main menu/operating mode

Limiting debit card recharging (only for BDV/MDB card readers)

In case a BDV or MDB card system is connected to the coin changer, you may define a maximum credit with which debit cards can be charged.



If you do no longer want the customers to credit their debit cards, you can configure a credit of 099.00.

To configure a credit limitation:

Quick approach:

= Main menu > E = Settings > Operating modes > Limitations > Credit limit for cashless

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu. The required menu item has already been selected
3	E	1 x	You enter submenu OPERATING MODES
4	B	until Limitations	You want to enter submenu LIMITATIONS
5	E	1 x	You enter the submenu
6	B	until Credit limit for cashless	You want to determine a credit limitation
7	E	1 x	Now you can set the function
8	D / C	until required digit	You highlight the digit to be set
9	A / B	until required value	This value is to be set
10	*Please repeat steps 8 and 9 to set the other digits of the credit limitation, if necessary*		
11	E	1 x	You lock the set credit limitation in memory
12		1 x/2 x	You return to main menu/operating mode

Setting up communication with external audit unit (only c² BDV/Executive)

If there is an external machine audit unit connected, the only thing to do is to set up communication with the coin changer.

To activate the communication between coin changer and external audit unit:

Quick approach:

`= Main menu > E = Settings > Peripheral > Audit unit in the machine`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu
3		until `Peripheral`	You want to enter submenu PERIPHERAL
4		1 x	You enter the submenu
5		until `Audit unit in the machine`	You want to set up the communication with the external audit unit
6		1 x	Now you can set up communication
7		until setting desired	You want the communication to be ACTIVE/NOT ACTIVE
8		1 x	You lock the setting in memory
9		1 x/2 x	You return to main menu/operating mode

9 Audit (option)

This chapter describes all settings to be considered if the coin changer is equipped with an internal audit module. You learn how to

- set the vending machine number
- set date and time
- specify data to be printed
- set the output device (format/device type)
- activate the maximum IrDA readout speed (only c² with IrDA interface on coin validator)
- enable Bluetooth audit

The language of the audit receipts has been selected with the dialogue language (cp. section "Selecting menu language" in Chap. 3 "Presettings").

Setting vending machine number

In order that the audits can easily and unambiguously be assigned to a certain vending machine, we recommend to store a vending machine number in the coin changer.

Configuring a vending machine number reinitialises the coin changer, and all audit data since the last initialisation will be deleted. (For reading out/printing the c² audit data please refer to the separate service manual, if necessary).

If you use a mobile data retrieval unit (MDE) to audit the coin changer data, the vending machine number cannot be changed.

To set the vending machine number:

Quick approach:

= Main menu > E = Settings > Audit module > Machine number

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until Audit module	You want to enter submenu AUDIT MODULE
4	E	1 x	You enter the submenu. The required menu item has already been selected
5	E	1 x	Now you can set the MACHINE NUMBER
6	D / C	until required digit	You highlight the digit to be changed
7	A / B	until required value	This value is to be set
8	*Please repeat steps 6 and 7 to set the other nine digits of the machine number, if necessary*		
9	E	1 x	You lock the set number in memory
10		1 x/2 x	You return to main menu/operating mode

Setting date and time

In order to be able to print or read out the audit data with date and time, you have to set the system time:

Quick approach:

`= Main menu > E = Settings > Audit module > Set system date/time`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu
3		until `Audit module`	You want to enter submenu AUDIT MODULE
4		1 x	You enter the submenu
5		until `Set system date`	You want to set the SYSTEM DATE
6		1 x	Now you can set the date
7	/	until required digit	You highlight the digit to be changed
8	/	until required value	This value is to be set
9	*Please repeat steps 7 and 8 to set the other digits of the date, if necessary*		
10		1 x	You lock the set date in memory
11	*Press -key and repeat steps 5 to 10 to set the time*		
12		1 x/2 x	You return to main menu/operating mode

Specifying data to be printed

For the printout of audit data you can set the following:

- Printing/Not printing time
- Printing/Not printing product/price-specific audit data
- Printing/Not printing tube and cash-box sales data



The language of the audit receipts has been selected with the dialogue language (cp. section "Selecting menu language" in Chap. 3 "Presettings").

To specify data to be printed:

Quick approach:

= Main menu > E = Settings > Audit module > Configurate audit interface > Time/ Product-specific data/Sales data

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until Audit module	You want to enter submenu AUDIT MODULE
4	E	1 x	You enter the submenu
5	B	until Configurate audit interface	You want to enter submenu CONFIGURATE AUDIT INTERFACE
6	E	1 x	You enter the submenu. The menu item for the first setting has already been selected
7	E	1 x	Now you can set whether audit receipts are to be printed with or without date & time
8	A/B	until setting desired	You want the date/time to be printed/ not to be printed
9	E	1 x	You lock the setting in memory
10	*Press F-key, then B-key and repeat stepts 7 to 9 for settings "Product-specific data/ Sales data"*		
11		1 x/2 x	You return to main menu/operating mode

Setting output device

Please set once with which printer/data acquisition device you want to output audit receipts (with or without start button) and which format is going to be used.

The language of the audit receipts has been selected with the dialogue language (cp. section "Selecting menu language"in Chap. 3 "Presettings").

Selecting printing format

Two different formats can be used to print audit data:

- Extra broad printout (24 characters/line):
  audit data can be separated in "since initialisation" and "since last printout" and printed out side by side.
- Unsorted printout (12 characters/line)

To select printing format:

Quick approach:

`= Main menu > E = Settings > Audit module > Configurate audit interface > Printer format`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu
3		until `Audit module`	You want to enter submenu AUDIT MODULE
4		1 x	You enter the submenu
5		until `Configurate audit interface`	You want to enter submenu CONFIGURATE AUDIT INTERFACE
6		1 x	You enter the submenu
7		until `Printer format`	You want to set the PRINTER FORMAT
8		1 x	Now you can set the format.
9	/	until setting desired	You want the audit receipts to have a broad format (24 characters/line) or normal format
10		1 x	You lock the selected format in memory
11		1 x/2 x	You return to main menu/operating mode

Selecting type of output device

The coin changer must know whether the printer or mobile data acquisition device (MDE) has a start button or not, so that the output line of printers/ readout devices without start button (they start to output data as soon as they are connected) will be monitored and the data output be stopped after all data has been transmitted.



Set the NRI printer G-55.0510 to "(start button) not exists" and the NRI USB Audit Stick to "(start button) exists".

To select the type of output device:

Quick approach:

= Main menu > E = Settings > Audit module > Configurate audit interface > Start button on printer

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until Audit module	You want to enter submenu AUDIT MODULE
4	E	1 x	You enter the submenu
5	B	until Configurate audit interface	You want to enter submenu CONFIGURATE AUDIT INTERFACE
6	E	1 x	You enter the submenu
7	B	until Start button on printer	You want to set the output device type
8	E	1 x	Now you can select the device type
9	A/B	until setting desired	You want to output audit data using a device with/without start button
10	E	1 x	You lock the selected type of output device in memory
11		1 x/2 x	You return to main menu/operating mode

Activating maximum IrDA readout speed (only c² with IrDA interface on coin validator)

If the changer's coin validator is equipped with an IrDA interface and this interface is used to readout audit data, you can set a maximum readout speed of 115 kBd in the coin changer.

To select the maximum IrDA readout speed:

Quick approach:

`= Main menu > E = Settings > Audit module > Configurate audit interface > IrDA high speed`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until `Audit module`	You want to enter submenu AUDIT MODULE
4	E	1 x	You enter the submenu
5	B	until `Configurate audit interface`	You want to enter submenu CONFIGURATE AUDIT INTERFACE
6	E	1 x	You enter the submenu
7	B	until `IrDA high speed`	You want to activate/deactivate the highest readout speed
8	E	1 x	Now you can set the function
9	A/B	until setting desired	You want to read out audit data with 19,200 Bd/at a slower rate
10	E	1 x	You lock the selected readout speed in memory
11		1 x/2 x	You return to main menu/operating mode

Activating Bluetooth audit (only c² with Bluetooth module)

If the coin changer has been retrofitted with a Bluetooth interface module and audit data is going to be read out via Bluetooth, you have to enable the Bluetooth audit function in the changer audit settings beforehand:

If the changer has already been delivered as c² Bluetooth, this function is factory-set.

Quick approach:

= Main menu > E = Settings > Audit module > Configurate audit interface > Readout with Bluetooth

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until Audit module	You want to enter submenu AUDIT MODULE
4	E	1 x	You enter the submenu
5	B	until Configurate audit interface	You want to enter submenu CONFIGURATE AUDIT INTERFACE
6	E	1 x	You enter the submenu
7	B	until Readout with Bluetooth	You want to activate/deactivate the Bluetooth audit function
8	E	1 x	Now you can set the function
9	A/B	until active / not active	You want to read out audit data via Bluetooth / do not want to use Bluetooth
10	E	1 x	You lock the selected readout speed in memory
11		1 x/2 x	You return to main menu/operating mode

Please refer to the currenza c² Bluetooth datasheet to learn how to read out audit data via Bluetooth.

10 Basic settings

This chapter describes how to perform basic changer settings, that seldom need to be changed (e.g. for a new installation site):

- Smallest coin value as a basis of calculation for coin values/prices
- Decimal point position
- Alternative coin value for second currency or as token value
- Currency or calling code
- MDB level
- Mains or battery operation
- Wake-up time
- Write protection for coin changer configuration

Changing smallest coin value (base value)

For the coin changer, the smallest coin value is the reference value for the data management of all programmed coin and token values as well as prices. The values of all accepted coin types/tokens and all prices must be integral multiples of the smallest coin value.

Whenever the smallest coin value is changed in such a way that it is no longer an integral and common divisor, the coin/token values and prices must be changed and adapted accordingly!

To change the smallest coin value:

Quick approach:

= Main menu > E = Settings > Other settings > Base coin value

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu
3		until Other settings	You want to enter submenu OTHER SETTINGS
4		1 x	You enter the submenu. The required menu point is already selected
5		1 x	You want to change the smallest coin value (BASE COIN VALUE)
6		until required digit	You highlight the digit to be changed
7		until required value	This value is to be set
8	*Please repeat steps 6 and 7 to set the other three digits of the smallest coin value, if necessary*		
9		1 x	You lock the set value in memory
10		1 x/2 x	You return to main menu/operating mode

Changing decimal point position (only c² MDB)

This function specifies the position of the decimal point for the vending machine display. You may set from no decimal place (point) to three decimal places. The decimal point setting has an influence on the functions listed in the following:

- Smallest coin value (base value)
- Tube coin values
- Channel coin values
- Prices
- Token values
- Hopper coin values
- Acceptance and change limitation
- Subsidy amount and credit limitation for card system



If the decimal point position changes, all other changer settings depending on the decimal point are changed automatically (see list above).

To change the decimal point position:

Quick approach:

`= Main menu > E = Settings > Other settings > Decimal places`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until `Other settings`	You want to enter submenu OTHER SETTINGS
4	E	1 x	You enter the submenu
5	B	until `Decimal places`	You want to change the DECIMAL POINT position
6	E	1 x	Now you can change the decimal places
7	A/B	until required number of decimal places [0–3]	This number is to be set
8	E	1 x	You lock the number of decimal places set in memory
9		1 x/2 x	You return to main menu/operating mode

Configuring alternative coin value for second currency or as token value

With the alternative coin value you may specify on the one hand the coin value of a second currency and on the other hand the value for a token. Configuring an alternative coin value invalidates the real coin value.



The alternative coin value is only used as token value if the vending machine cannot identify the token ID coming from the coin changer. The alternative coin value does not report a token but a coin.

Conventional token values are configured using the setting menu (cp. separate service manual).

First of all the HENRI service tool must be connected to the coin changer (see section "Connecting HENRI" in Chap. 2 "General information").

To set an alternative coin value:

Quick approach:

 = HENRI main menu >  = Extended functions >  = Channels

	Press key ...	How often?	Effect
1		1 x	You enter the HENRI main menu
2		1 x	You enter submenu EXTENDED FUNCTIONS
3		1 x	You want to set an alternative coin value
4		until required coin/coin channel	You highlight the coin an alternative value is to be set for
5		2 x	Now you can set/change the ALTERNATIVE VALUE
6		until required digit	You highlight the digit to be changed
7		until required value	This value is to be set
8	*Please repeat steps 6 and 7 to set the other digits of the alternative value, if necessary.*		
9		1 x	You lock the set alternative value in the HENRI memory
10		2 x	You want to store the set alternative value in the coin changer?
11		1 x	You lock the set alternative value in the coin changer memory
12		1 x	You enter the HENRI main menu again
13		1 x/2 x	You return to the c² operating mode/c² main menu

Changing currency/calling code (only c² MDB)

The numeric currency code (ISO 4217) which can be sent, e.g., for the VMC dialogue language is set to the main currency on delivery.



Please use the last three digits of the 4-digit input field to set the 3-digit currency code. The first digit is not part of the currency code and must be set to "1".
Example: euro currency code = 978 > input = 1978

For more information on the currency code please refer to the MDB specification "NAMA document MDB/ICP 2.0" (www.vending.org).

Some vending machines ask for the international country calling code and not for the currency code (ITU E.164, e.g. 0033 for France) (cp. vending machine manual).

To change the currency/calling code:

Quick approach:

= Main menu > E = Settings > Other settings > Currency code

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until Other settings	You want to enter submenu OTHER SETTINGS
4	E	1 x	You enter the submenu
5	B	until Currency code	You want to change the CURRENCY CODE
6	E	1 x	Now you can change the code
7	D / C	until required digit	You highlight the digit to be changed
8	A / B	until required value	This value is to be set
9	*Please repeat steps 7 and 8 to set the other digits of the currency code, if necessary*		
10	E	1 x	You lock the set code in memory
11		1 x/2 x	You return to main menu/operating mode

Changing MDB level (only c² MDB)

In cases the coin changer is supposed to communicate as MDB level 2 instead of MDB level 3 changer:

Quick approach:

`= Main menu > E = Settings > Other settings > MDB level`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu
3		until `Other settings`	You want to enter submenu OTHER SETTINGS
4		1 x	You enter the submenu
5		until `MDB level`	You want to change the MDB LEVEL
6		1 x	Now you can change the level
7		until required level	This level is to be set
8		1 x	You lock the selected MDB level in memory
9		1 x/2 x	You return to main menu/operating mode

Selecting mains operation or battery operation (only c² MDB)

Depending on the installation site, MDB coin changers equipped with a battery and a wake-up line, can always be switched to mains or battery operation. For this the changer has two DIL switches accessible when removing the coin cassette:

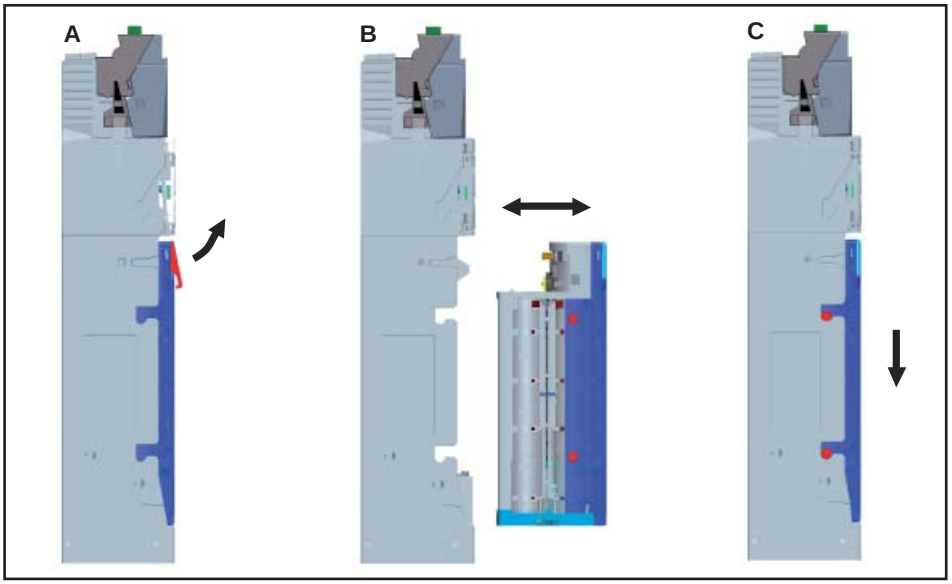


Fig. 4: Removing and reinstalling coin cassette

1 Remove coin cassette:
   – Pull latch (Fig. 4, A).
   – Pull cassette straight out of the housing guides to the front (Fig. 4, B).

2 For standard mains operation, use a pointed object to push the two DIL switches upward to STANDARD, for battery operation, downward to BATTERY (see Fig. 5 and markings on the coin changer housing).

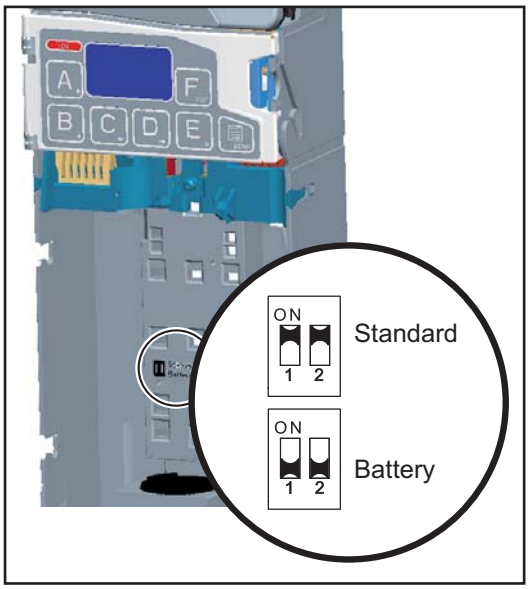


Fig. 5: Switches for mains/battery operation

3 Reinsert coin cassette:
- Insert cassette in upper and lower housing guides (Fig. 4, B).
- Push cassette into the housing.
- Press cassette down and let it engage in the upper and lower housing guides (audible click) (Fig. 4, C).

4 Switch the power off and then on again.
The desired operating mode is activated.

Configuring wake-up time (only c² MDB)

For MDB coin changers running in battery mode and with external wake-up line, a time can be set specifying how long the changer will continue to remain switched on since the last time the vending machine addressed the changer (wake-up time). After the wake-up time has elapsed, the changer switches off automatically.

The wake-up time is set in seconds. Settings under 1 and over 20 will be ignored. In this case, the coin changer will consider the default setting of 4 seconds.

To configure the wake-up time:

Quick approach:

`= Main menu > E = Settings > Other settings > Wake-up time`

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2	E	1 x	You enter the SETTING menu
3	B	until `Other settings`	You want to enter submenu OTHER SETTINGS
4	E	1 x	You enter the submenu
5	B	until `Wake-up time`	You want to change the WAKE-UP TIME
6	E	1 x	Now you can change the time
7	D / C	until required digit	You highlight the digit to be changed
8	A / B	until required value	This value is to be set
9	*Please repeat steps 7 and 8 to set the other digit of the wake-up time, if necessary*		
10	E	1 x	You lock the set time in memory
11		1 x/2 x	You return to main menu/operating mode

Providing coin changer configuration with write protection for BDV machines (only c² BDV)

You may provide the configuration data of the coin changer with a write protection in order that it cannot be overwritten by the BDV vending machine control.

To activate/deactivate the write protection:

Quick approach:

= Main menu > E = Settings > Operating modes > Write protection for BDV VMC

	Press key ...	How often?	Effect
1		1 x	You enter the main menu
2		1 x	You enter the SETTING menu. The required menu item has already been selected
3		1 x	You enter submenu OPERATING MODES
4		until Write protection for BDV VMC	You want the write protection to be ACTIVE/NOT ACTIVE
5		1 x	Now you can set the function
6		until setting desired	The c² configuration is not to be overwritten/may be overwritten
7		1 x	You lock the setting in memory
8		1 x/2 x	You return to main menu/operating mode

11 Batch configuration

If the same settings are to be made for several coin changers of the same series, it is sufficient to

1. configure one changer as required,
2. save this state of settings in the HENRI service tool and then
3. transmit the state of settings from HENRI into the remaining changers to be configured.

Only the data that applies to the coin changer will be stored and transmitted but not the data saved in the coin validator or peripheral equipment. The following settings remain unaffected and may need to be adapted in addition:

- Coin and currency data
- Acceptance bands and coin values



Please note that, whenever you are copying coin changer data from older devices with a smaller range of functions and load this data into a new device, the new functions may need to be adapted, if necessary. In the opposite case, an older device will also not be provided with the additional functions of the new device.

Configuring coin changer master

If you haven't done so already, first of all you have to configure a coin changer so that its configuration can be used as clone for the other coin changers to be configured (see Chap. 3 "Presettings" to Chap. 10 "Basic settings").

Storing desired configuration in HENRI

First of all connect the HENRI service tool to the coin changer with the configuration to be cloned (see section "Connecting HENRI" in Chap. 2 "General information").

Quick approach:



	Press key ...	How often?	Effect
1		1 x	You enter the HENRI main menu
2	B	1 x	You enter submenu EXTENDED FUNCTIONS
3	C	1 x	You want the configuration of the coin changer connected to be saved for batch configuration in HENRI
4	A	1 x	Data is being transferred to HENRI. Following the 100% display message:
5	F	1 x	You enter submenu CLONE again

Transferring desired configuration to coin changers

First of all connect the HENRI service tool to the coin changer to be configured with the clone (see section "Connecting HENRI" in Chap. 2 "General information").

Quick approach:



	Press key ...	How often?	Effect
1		1 x	You enter the HENRI main menu
2	B	1 x	You enter submenu EXTENDED FUNCTIONS
3	C	1 x	You want the c² configuration stored in HENRI to be transferred to the coin changer connected
4	B	1 x	The stored configuration file(s) is/are displayed
5	E	1 x	Data is being transferred to the coin changer. Following the 100% display message:
6	F	1 x	You enter submenu CLONE again
7	F	2 x	You enter the HENR main menu again
8		1 x/2 x	You return to the c² operating mode/c² main menu

Please repeat cloning for all coin changers to be configured.

Adapting individual settings

Finally we recommend random checks of the data cloned and that individual settings of the changers or the coin and currency data is adapted, if necessary.

12 Index

2 price lists with cashless 63
12/24 character printout, audit module 70

A

Acceptance
  Band, select 35
  Limit. *See* Acceptance limitation
  Limitation 31
  Tube coins 32
  Tolerances, select 35
Alternative coin value 77
Attention 7
Audit 66
  Module, internal 66
  Bluetooth data readout 73
  Date/time 68
  Max. IrDA readout speed 72
  Output device 70
  With/without start button 71
  Printing format 70
  Vending machine number 66
  Which data is to be printed? 69
  Unit
  In the machine 65
  Set up communication 65
Automatic tube counter
  Correction 18
  Programming 17

B

Banknote
  Acceptance
  Inhibit
  When there is not enough change 57, 60
  With card payment 60
  Limit 31
  Escrow, activate 61
  Recycler. *See* Recycler
Banknotes, payout all 58
Base value. *See* Smallest coin value
Basic settings 74
Batch configuration 83
Battery operation
  Save current 46
  Select 80
  Wake-up time 81
BDV card system 62
Bill
  Acceptance. *See* Banknote acceptance
  Escrow, activate 61
  Recycler. *See* Recycler
  Validator 59
  Inhibit banknote acceptance 60
  Set up communication 59
blue (c2) 9
c2 9
Bluetooth audit data readout 73
Brightness (display) 12

C

c2
  Machine interfaces 9
  spider
  Hopper coin values 48
  Inverting sorter paths 49
  User interfaces 9
Calling code 78
Card charging, limit 64
Card reader 62
  2 price lists with cashless 63
  Limit card recharging 64
  Set up communication 62
Cashbox 13
Cash-box coins, inhibit (in filling mode) 20
Caution 7

Change 13
Limit 43. *See* Change limitation
Limitation 43
Machine mode (small coins first) 47
Payout, when? 27, 28
Reset 29
Store 29
Tubes
Float level 15, 17
New 40
Replenishment, display 21
Security stock 38
Chapter summary 7
Charging cards, limit 64
Clone coin changer configuration 83
Code (tube empty message) 44
Coding scheme (tube empty message) 44
Coin
Acceptance
Inhibit 33
If „tube empty“ 34
Limit 31
Cassette
Float level 15, 17
More than 255 same coins 42
New 40
Remove/reinstall 80
Replenishment, display 21
Security stock 38
Group A/B, select 36
Stack, problems 38
Validator, remove/reinstall 36
Value
Alternative 77
In c² spider hoppers 48
In hopper 51
Coins
Hopper 51
c² spider 48
Counter crorrection 54
Inhibit 33
If „tube empty“ 34
More than 255 same tube coins 42
Comment 7
Committed to vend 27
Communication
With bill validator, set up 59
With card system, set up 62
With external audit unit, set up 65
With hopper, set up 52
With recycler, set up 55
Conditions for Tube empty 44
Configuration
Clone 83
Save 82
Configure inventory keys 22
Connection 10
Contrast (display) 12
Conventions, manual 7
Correction, automatic
Hopper counters 54
Tube counters 18
Counter correction, hopper coins 54
Credit
Limit. *See* Credit limitation
Limitation 64
Currency
Code 78
Select 36
currenza c2
blue/green/orange/white 9
Machine interfaces 9
User interfaces 9

D

Data acquisition device, audit module 70
Date/time, data acquisition device 68
Debit card reader. *See* Card reader
Decimal point/places 76
Dialogue language 11
Machine control system 78
DIL switches
Select battery/mains operation 80
Select coin group 36
Disassembly/assembly
Coin cassette 80
Coin validator 36

Display
Contrast 12
Message (operating mode) 13
Price 26
Texts 7
Disposal 7
Documentations, additional 8

E

Empty
Recycler store 58
Sensor 44
Environmental protection 7
Escrow function, enable for banknotes 61
External
Audit unit 65
Devices 50

F

Filling
Display 21
Level
Limitation 32
Sensors 18
Lowest (empty sensor) 44
Transmit to machine 21
Fill report 21
Float
Level 15, 17
-up function 15, 16
Format for printout, audit module 70
Fraud coin rejection, optimise 35

G

General information
Configuration 9
HENRI service tool 9
Manual 7, 9
Settings for tube filling 14
Genuine coin acceptance, optimise 35
green (c2) 9
Guide (chapter) 7

H

Hazard 7
HENRI
Connect 10
General information 9
Hopper 50
Coin counter correction 54
Coin values 51
c² spider 48
Inverting c² spider sorter paths 49
Paying out hopper coins first 53
Set up communication 52

I

Indicate of price of product 26
Inhibit
Banknote acceptance 60
Cash-box coins (in filling mode) 20
Coin acceptance 33
If „tube emtpy“ 34
High-value banknotes 57
Keys 22
Instructions, additional
Additional 8
Interfaces, c2 9
Introduction
Configuration 9
HENRI service tool 9
Manual 7, 9
Settings for tube filling 14
Inventory 13
Keys, disable 22
IrDA high speed 72

K

Keyboard, disable 22
Keys in the text 7

L

Language 11
Vending machine control system 78
Level, MDB 79

M

Machine
  Interfaces, c2 9
  Number 66
Mains operation, select 80
Manage prices (price holding) 25
Manual
  Additional 8
  Conventions 7
Markings in the text 7
MDB
  Card system 62
  Level 79
Menu
  Items in the text 7
  Language 11
  Texts 7
Message, display in operating mode 13
Minimum number, tube coins 38
Money changer 27
Motor, only one active 46
Multiplier, cv. *See* Smallest coin value
Multi vend 28

N

New payout combination 40
Note
  Acceptance. *See* Banknote acceptance
  Recycler. *See* Recycler
  Validator. *See* Bill validator
Notes 7

O

Only tube coin in filling mode 20
orange (c2) 9
Output device, audit unit 70, 71

P

Payout
  As change machine (small coins first) 47
  Combination 40
  of hopper coins prior to cassette coins 53
  Record more than 255 same tube coins 42
  Single-motor operation 46
Peripheral devices 50
Pictograms in the text 7
Presettings 11
Price holding 25
Prices
  Display 26
  Extra for card payment 63
  Manage 23, 25
  Set 24
Printer, audit module 70
Printing
  Data, audit module 69
  Format, audit module 70
Program tube counters autom. 17

R

Readout, audit data
  Speed 72
  Via Bluetooth 73
Recycler 55
  Inhibit high-value banknotes 57
  Pay out all banknotes 58
  Set up communication 55
Remaining credit
  Limit 43
  Reset 29
  Store 29
Replenishment
  Display 21
  Transmit to machine 21
Residual credit 29
RJ-45 plug 10

S

Safety instructions 7
Save configuration 82
Second currency 77
Security
  Level 35
  Stock 38
  Of machine, compensate (recycler) 58
  Payout (DISPENSE) 39
  Per tube 38
  To VMC 39
  Transmit with tube filling level 39

Select tube cassette 40
Selling price
  Display 26
  Extra for card payment 63
  Manage 23, 25
  Set 24
Sensors, tubes 18
Service tool HENRI
  Connect 10
  General information 9
Settings
  Clone 83
  For printer 69
Short reference guide, additional 8
Simple payout 46
Single
  -Motor payout 46
  Vend 28
Small coins first (Change machine mode) 47
Smallest coin value 74
Sorting
  c² spider settings 48
  New 40
Speed, audit data readout 72
spider c²
  Hopper coin values 48
  Inverting sorter paths 49
Standard operation, select 80
Start button
  Output device 71
  Printer 71
Summary
  Chapter 7
  Manual 7
Switches
  Select
  Battery/mains operation 80
  Coin group 36
Symbols in the text 7
System time, audit module 68

T

Text conventions 7
Time/date, audit module 68
Token
  Settings 30
  Teaching 30
  Value 30, 77
Tube
  Coins
  Maximum number 32
  Min. number (security stock) 38
  More than 255 of same denomination 42
  New 40
  Combination
  For tube empty 44
  New 40
  Counter correction, automatic 18
  Counters
  Automatic programming 17
  Correct. to zero 19
  Empty message, when? 44

U

User interfaces, c2 9

W

Wake-up time, battery operation 81
white (c2) 9
Write protection for BDV VMC 82